

Non-Users Manuel Battery Vacuüm Suction Cup Lifter “KIM75”

General:

Read the Manuel carefully and with attention before use. You need to follow all health and safety regulations to work safe with this product. The electric vacuum suction cup lifter model SirLiftAlot75 SN GR232448. It is a manual light weight vacuum lifter for a maximum horizontal load of 75 kg.

The vacuum lifter can be used for flat and non porous material, no air can come through the material, like glass, Ceramic tiles, steel, etc. It is not permitted to use the vacuum lifter on material where air comes through.

The vacuum lifter can be charged by a USB cable. When you put the vacuum lifter on, and put it to the air tight material, the vacuum lifter will pump automatically. The vacuum lifter will stop pumping when the safe vacuum level is reached. When there is a loss of vacuum the vacuum lifter will start pumping to the safe level again. This system works very efficiently, safely and quickly. YOU ONLY LIFT YOUR MATERIAL WHEN THE PUMP STOPS PUMPING, WHILE PUMPING NO LIFTING.

NEVER PUT THE VACUUM LIFTER OUT DURING LIFTING, THIS IS DANGEROUS YOU WILL LOSE VACUUM AND THE MATERIAL FALLS DOWN

DURING PUMPING THE VACUUM LIFTER IS NOT READY FOR USE. WHEN THE VACUUM LIFTER KEEPS ON PUMPING, THE MATERIALS YOU WANT TO LIFT IS NOT SUITABLE OR THE BATTERY IS NOT COMPLETELY CHARGED OR THE VACUUM LIFTER IS BROKEN. GET IN TOUCH WITH DELIVERER.

Safety:

All vacuum lifters are tested before delivery. The vacuum system and the functions are tested properly.

The lifter is a manual lifter, handgrip, so it is forbidden to use it in or on a crane or other lifting device.

SirLiftAlot or Gevelridder uses and sells these vacuum lifters also in frames with 2 or 4 in a frame. For this complete installation you get a CE certificate with user manual specially for this lifter. This manual is not suitable for these installations and cannot be used.

The users or workers who use this vacuum lifter need to wear personal protection like work shoes and gloves. They also need to follow the Health and safety regulations.

When there is a possibility people can be hit by falling materials you cannot lift higher than 1 meter. In all other situations fall protection is permitted. Make sure no one can be hit by falling materials, clear the area.

- Forbidden use for lifting persons or animals.
- Forbidden to use by illegal activities.
- Use this vacuum lifter only when you have experience working with this lifter or you work under supervision of an experienced worker, also think about safe lifting and prevention of back problems, ergonomic lifting and use.
- Never put parts of your body or feet below the load.
- The weight on the vacuum lifter is only safe on a clean, dry and fat free surface with a temperature of 20 degrees.
- Working on heights, like in the mountains, can be of influence on the vacuum.
- Clean the rubber pad regularly with natural vinegar. Never use other aggressive cleaners. When the pad is fat or dirty the load will slide.
- The vacuum lifter is not water resistant or frost resistant, keep the pad always clean and dry.
- Store the vacuum lifter always in a proper way, in the suitcase specially for the KIM75 vacuum lifter.
- Vacuum lifter cannot be exposed to fire, heat or the sun.
- Don't use the vacuum lifter on very thin materials, they can break and damage the vacuum and.
- Always follow the user manual.

Warnings:

- Make sure the material is air tight and suitable for lifting with this vacuum lifter
- By lifting across, over your shoulder, there is a different force, the material must be suitable for this force. Think about curved glass that could break under pressure of the vacuum lifter, this can be very dangerous for the user. Make sure the material is suitable.
- The vacuum lifter is suitable for 75 kg. Note: following the Health and safety regulations 1 person can lift 25 kg max, 50 kg with 2 persons. Follow these rules always. On our website www.sirliftalot.com you can find products for lifting above 50 kg.
- Do not repair or change this product ever, without asking and permission of your deliverer.
- Never put a sharp knife or else in the rubber pad, never dismantle the pad from the handle.

List of accessories:


1 suction pad	1 load cable,
1 suitcase	1 user manual,
1 protect cup	2 filters
1 clean brush	

How does it work:

- A. Take the vacuum lifter out of the suitcase
- B. Remove the protection cup, control the pad on damage, check the filter. Arrange possible repair when necessary.
- C. Put the button on/off (1) the pump starts pumping and check the light, must be green. When you see a green light the vacuum lifter is ready for use. When the green light blinks you need to reload the vacuum lifter.
- D. Put the lifter against the material and it will pump and get vacuum directly.
- E. As pumping stops you can lift. Never put the vacuum lifter off during use.
- F. To take the vacuum off you push button (2)
- G. Put the vacuum lifter off (1) The green light is off.
- H. Put the protect cap on the pad.
- I. Put the vacuum lifter in the suitcase.

Loading:

- J. Before use you need to load the KIM75 about 8 hours. Use the loading cable enclosed.
- K. The battery needs to be reloaded when the green light blinks.
- L. Put the connector in the electric point.
- M. During loading the light is red.
- N. The battery is completely reloaded when the light turns green.

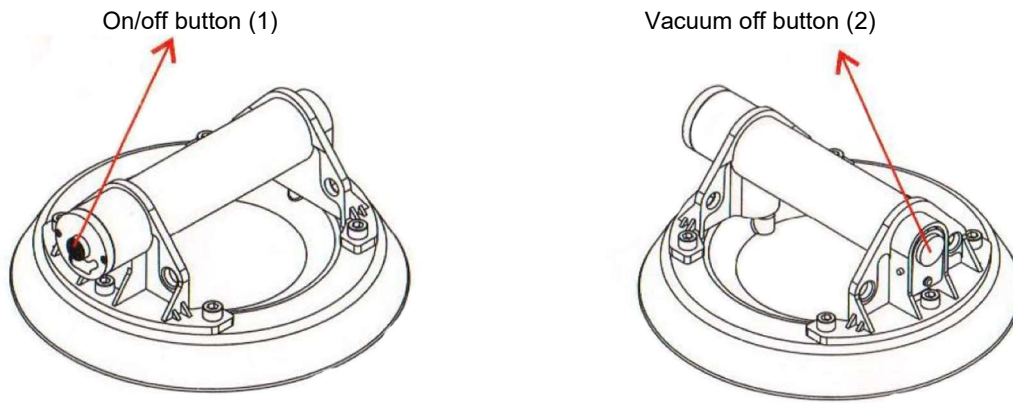

Parameters:

Battery	3. 7VDC 5200mAh Li-ion
Normal Working time (full charged)	48 hrs
Non-Stop working time (full charged)	16 hrs
Panel size	8 inches
netto gewicht van product met batterij	0,92 kg
Safe loading	75 kg
Charter Input Voltage	100-240VAC 50/60Hz 3. 7VDC2A
Charging mode	type-C
Battery Charging Time	8-10 hr.
With Automatic Off Switch	Yes

Quarantines:

This is a product for use as a workers tool so the warranty is limited. You get warranty 6 months after buying or delivery. In the warranty period you get repairs for free caused by production of the pad or production mistakes. The vacuum lifter is tested before delivery. Before use you must read and follow the user's instructions.

You get no warranty on the following problems:

- cracks or scratches in the pad caused by use.
- Damage on the product, handgrip, handles or cables.
- Abnormal cracks, scratches or dents.
- Damage caused by falling.
- Misused or stored incorrectly
- Improperly modified or repaired.



SirLiftAlot or Gevelridder stands for quality and care for human, animal and environment. We follow all Health and safety regulations, CE standards. Our products are safe and lighten heavy work. Our products have no polluting engines, quickly deployable and are lightweight. Parts of this product are produced outside Europe but we assemble and do the last quality control in Holland. We use the general terms and conditions of delivery of the private company Gevelridder Bv, registered in the trade register under number 61679232.